



<b>100</b>	Release button (RB) holder	<b>126</b>	Receptacle rubber
<b>101</b>	RB	<b>127</b>	Back (B) rubber tape b
<b>102</b>	RB spring	<b>128</b>	B rubber
<b>103</b>	RB rotation stopper	<b>129</b>	B rubber tape a
<b>104</b>	RB pin	<b>130</b>	Protection sheet
<b>105</b>	Shutter dial (SD) plate holder	<b>131</b>	Body cap
<b>106</b>	SD plate	<b>132</b>	Left (L) rubber
<b>107</b>	ISO plate	<b>133</b>	L rubber tape
<b>108</b>	ISO spring	<b>134</b>	Right (R) rubber
<b>109</b>	SD	<b>135</b>	R rubber tape
<b>111</b>	Advance lever (AL) cover grip	<b>136</b>	bottom cover
<b>112</b>	AL cover	<b>137</b>	Serial number label
<b>113</b>	AL washer	<b>138</b>	Focal convert dial
<b>114</b>	AL spring	<b>139</b>	Screw THB 2.0×4.0–2.5×0.5
<b>115</b>	AL plate	<b>140</b>	Screw PSK 1.7×3.5–2.5×0.5 (NI)
<b>116</b>	Storing washer	<b>142</b>	Screw PHK 1.7×2.5–2.5×0.5
<b>117</b>	AL cam	<b>143</b>	EP frame
<b>118</b>	Shoe spring	<b>144</b>	Screw PNK 1.7×3.5–2.5×0.5
<b>119</b>	Accessory shoe	<b>145</b>	Screw PHK 1.7×10.0–2.5×0.5
<b>120</b>	Eyepiece (EP) set assembly	<b>146</b>	Door spring
<b>121</b>	EP mask	<b>147</b>	Screw PNK 1.7×2.5–2.5×0.5
<b>122</b>	Socket cap	<b>148</b>	ISO stopper
<b>123</b>	Shaft	<b>149</b>	Screw PSK 1.4×2.5–2.0×0.45
<b>124</b>	SD card cover	<b>150</b>	Tripod socket
<b>125</b>	USB cap	<b>151</b>	Screw